
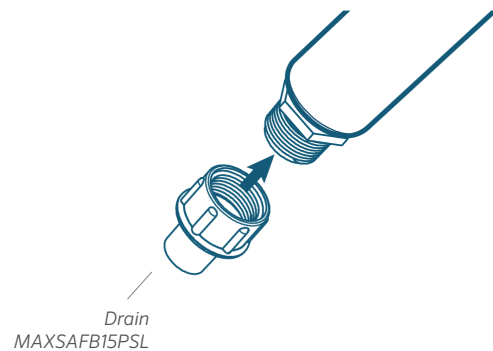
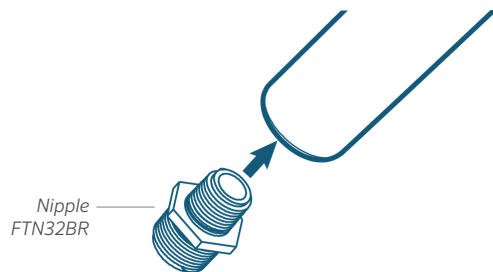
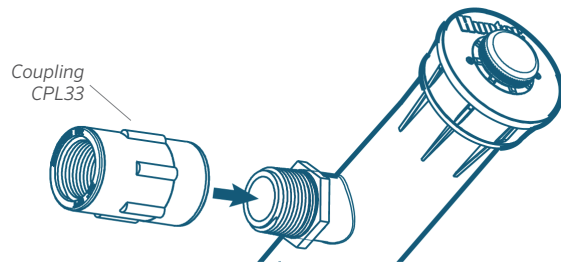


RECOMMENDED INSTALLATION

VPI - Visual Pressure Indicator

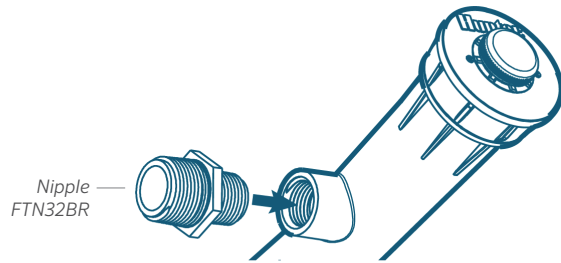

INSTALLATION

- Install one 3/4" x 1/2" nipple (FTN 32BR) into the side inlet of the body and tighten.
- Install the 3/4" x 3/4" coupling (CPL33) onto the fitting previously installed and tighten by hand.
- Install one 3/4" x 1/2" nipple (FTN 32BR) into the bottom inlet of the body and tighten.
- Install the drain (MAXSAFB15PSL) onto the other end of the adapter and tighten.

While not mandatory, Teflon tape can be used on the fittings during assembly for added security. Avoid using pipe dope. You can connect the VPI to the span through any outlet you choose for optimal visibility. Install a 3/4" NPT threaded tee fitting on top of the pivot mainline between the span outlet and gooseneck or sprinkler. Then, use a longer 3/4" NPT nipple to position the indicator according to your preference and mainline diameter.

SPECIFICATIONS

- Operating pressure: up to 100 psi
- Indication of system operation: above 15 psi
- Warranty period: 1 year
- Retracted height: 16-1/8"
- Pop-up extended height: 12"
- Exposed diameter: 2-1/4"
- Inlet size: 1/2"